

GATE AND DOOR REMOVAL

STANDARD 4C UNITS

BEFORE YOU BEGIN, ONLY DOOR TO BE REMOVED MUST BE UNLOCKED (POSTAL DOORS WILL REQUIRE USPS REMOVAL). IT IS NOT POSSIBLE TO REMOVE A LOCKED DOOR.

1. REMOVE "HOLD OPEN ARM".
PULL *COTTER PIN* – REMOVE *PIN* – REMOVE *ARM* (3 PARTS)
2. REMOVE (3) *TORX HEAD SCREWS*. TILT GATE FORWARD (BE CAREFUL TO LIFT *TOP BAR* OFF OF *TOP PIN*, SET ASIDE). LIFT GATE ASSEMBLY UP AND AWAY FROM BOX.
3. REMOVE *SPRING CLIP* FROM BOTH TOP AND BOTTOM ENDS OF *HINGE PIN*. SLIDE *HINGE PIN* EITHER UP OR DOWN (DEPENDING ON LOCATION OF DOOR TO BE REMOVED). (USE A *CENTER PUNCH TOOL* (OR *NAIL*) TO HELP GET THE *HINGE PIN* STARTED. BE CAREFUL NOT TO BEND *HINGE PIN*)

REVERSE ORDER TO RE-ASSEMBLE

